

# SPEC-D *Tuning*

## 2003-2006 CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.  
Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

### Product Part Numbers:

2LHP-SIV03-TM

2LHP-SIV03JM-TM

2LHP-SIV03B-TM


2LHP-SIV03JMB-TM




# CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.  
Please wear protection before you work on your vehicle.  
An assistant is helpful when removing the front bumper.  
Please be careful while working with the bumper or body part to avoid scratching.  
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

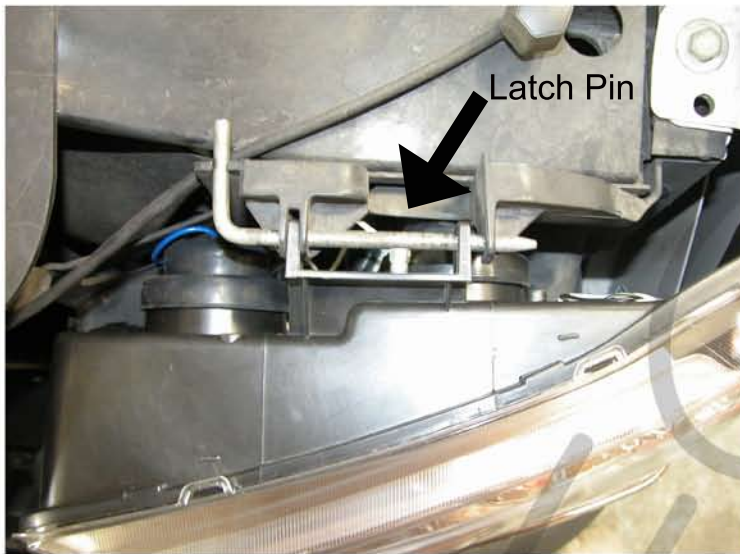


1. Open the hood, above the headlight you will notice a latch pin

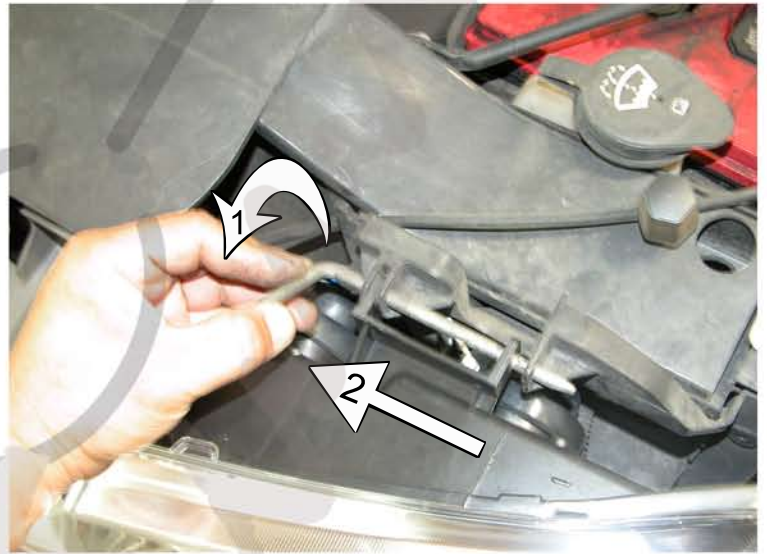


2. First, unlock the latch and pull it out




3. Behind the headlight, remove the connectors from the vehicle

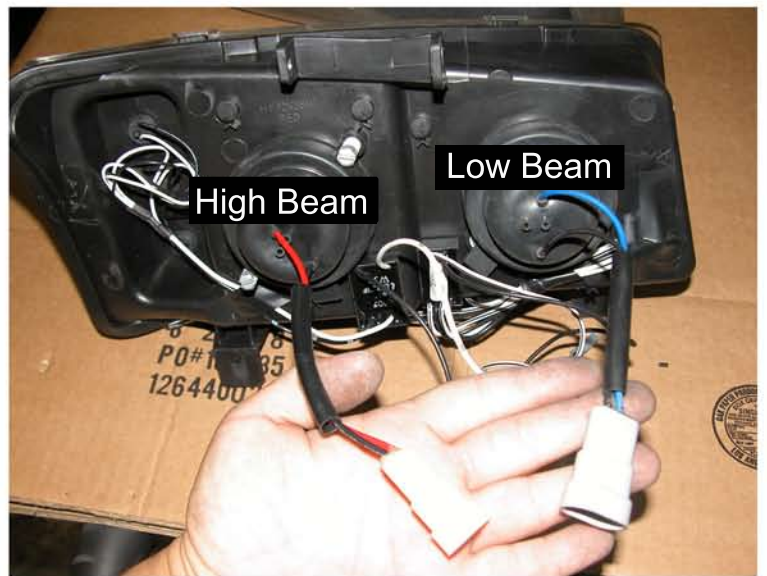

4. Before connecting the harness, please make sure which connector is the high beam and which is the low beam

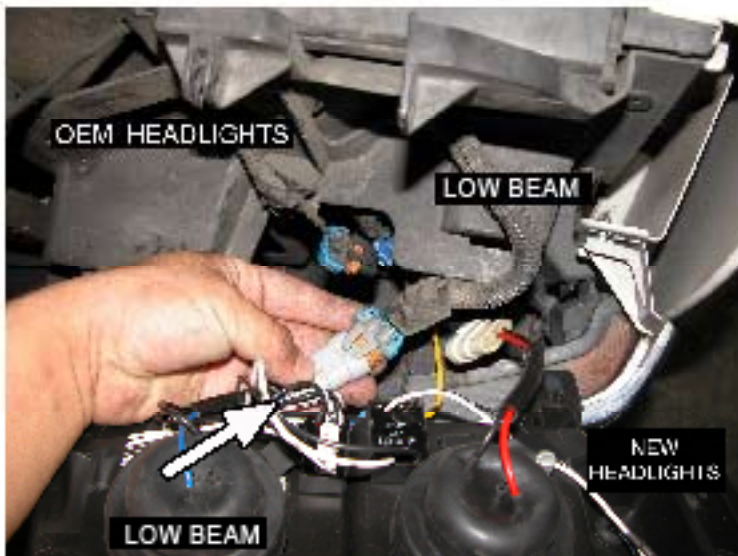


5. First connect the connector with the low beam

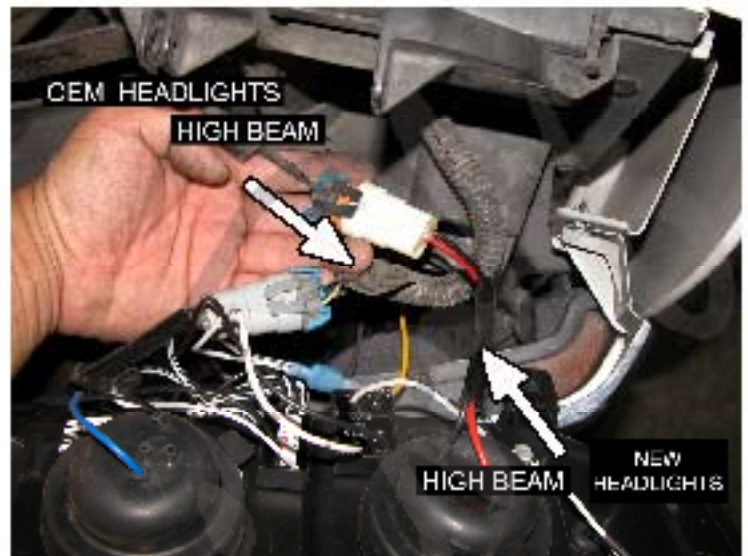

6. Then, connect the connector with the high beam



7. Gently install the headlight to its original spot

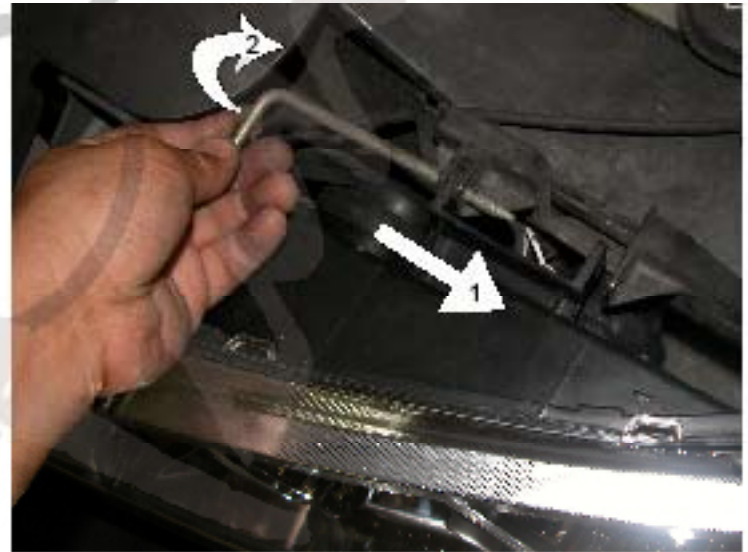

8. Replace the latch back to fasten the headlight  
(Please repeat the picture order from 1 to 8 for opposite side)



9. The installation is now complete