

SPEC-D *Tuning*

2005-2009 FORD MUSTANG SLOTTED WINDOW LOUVER INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.


TOOLS AND SUPPLIES REQUIRED

Scissors

Towel

Product Part Numbers:

WLQU-MST05C

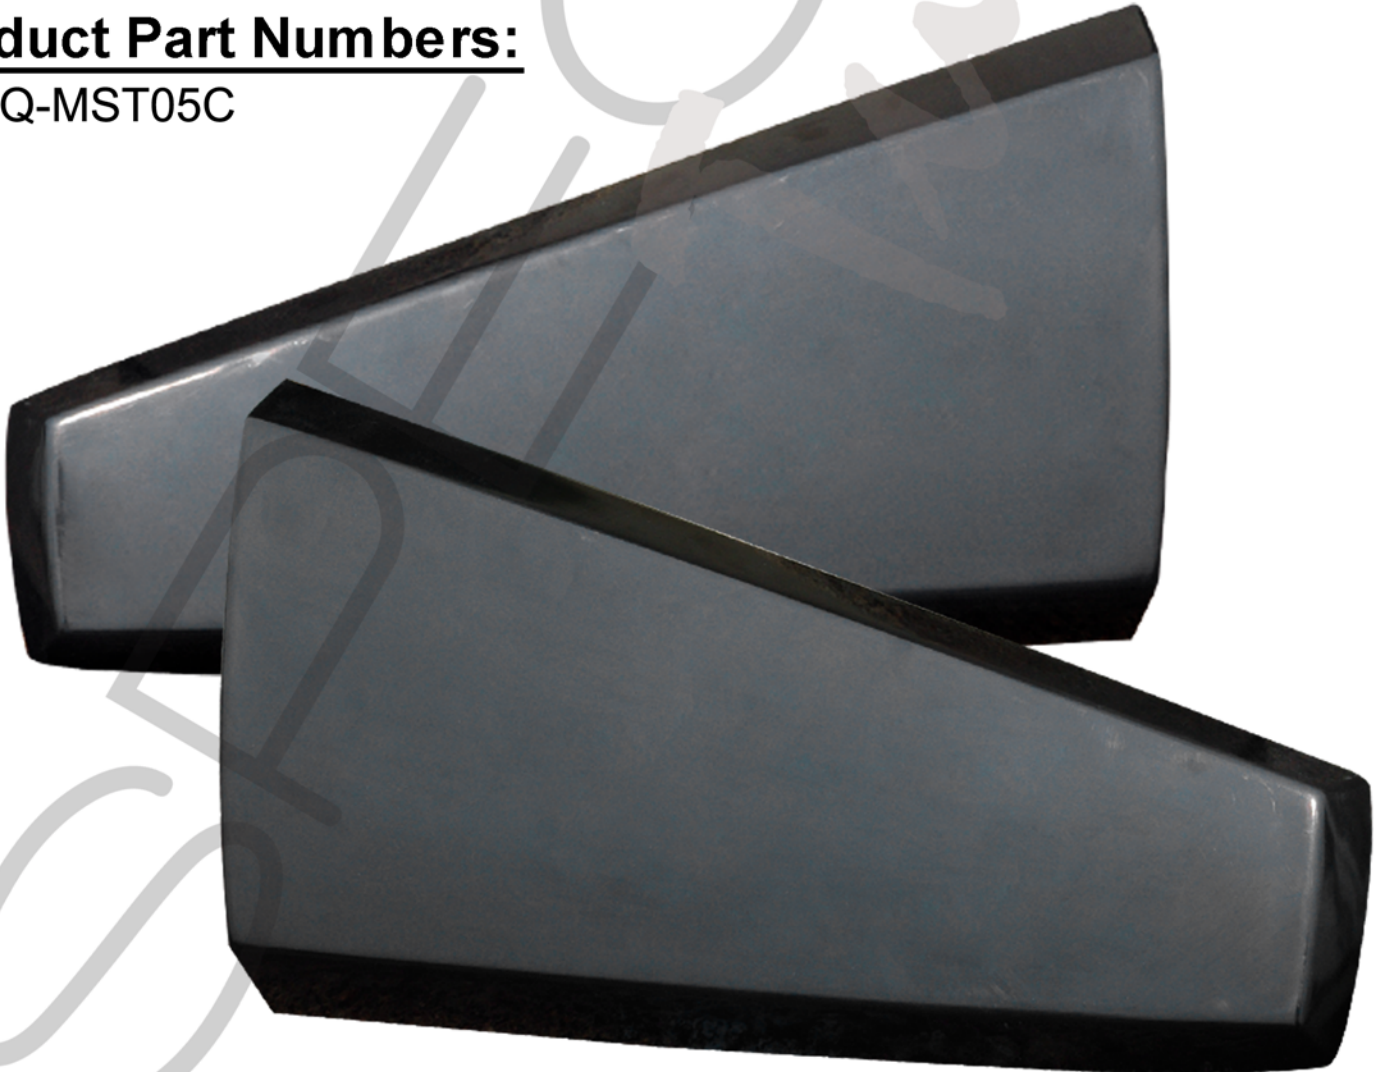

2005-2009 FORD MUSTANG SLOTTED WINDOW LOUVER INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Wipe the surface clean



2. Apply the double sided foam tape to the edges of the louver



3. Cut the double sided foam tape to length



4. Peel off the backing



5. Apply and press the louver onto the window



6. Please repeat the steps from 1 to 5 for the opposite side



7. The installation is now complete

