

# SPEC-D *Tuning*

## 2006-2010 DODGE CHARGER HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.  
Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

Handy Remover	3/4" Drive Extensions (8 to 10 inches)	If your Headlight is Halo type, you also need:	4 Blue Male Quick Wire Connectors
Trim Pad Remover	7mm Socket	Wire Stripper	4 Blue Female Quick Wire Connectors
Flat Tip Screwdriver	10mm Socket	Wire Crimper	2 Red Wires (8 inch)
3/4" Drive Ratchet		4 Blue Quick Splice Wire Connectors	2 Black Wires (8 inch)

### Product Part Numbers:

LHP-CHG05JM-TM

LHP-CHG05-TM




## 2006-2010 DODGE CHARGER HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.  
Please wear protection before you work on your vehicle.  
An assistant is helpful when removing the front bumper.  
Please be careful while working with the bumper or body part to avoid scratching.  
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Open the hood first

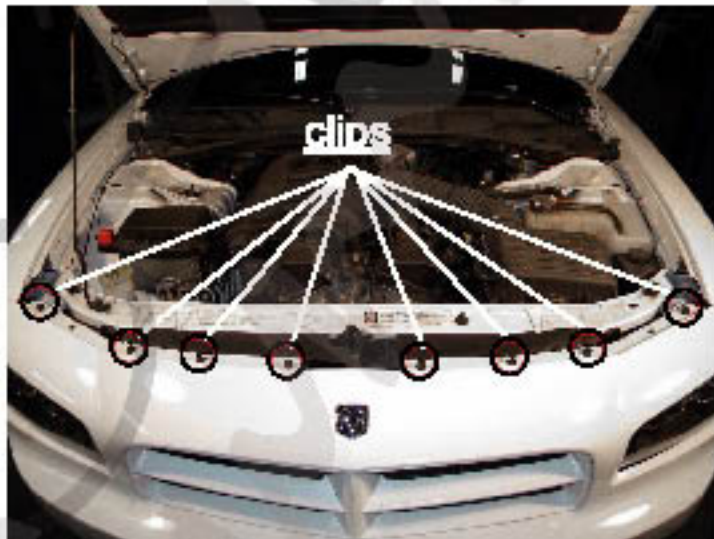

2. Remove eight clips



3. Remove the clips by using trim pad remover



4. Remove one 10mm bolt by using 1/4" drive ratchet(Both side)




5. Remove ten 7mm bolts and two 10mm bolts



6. Using drive ratchet to remove the 7mm bolts




7. Using drive ratchet to remove the 10mm bolts

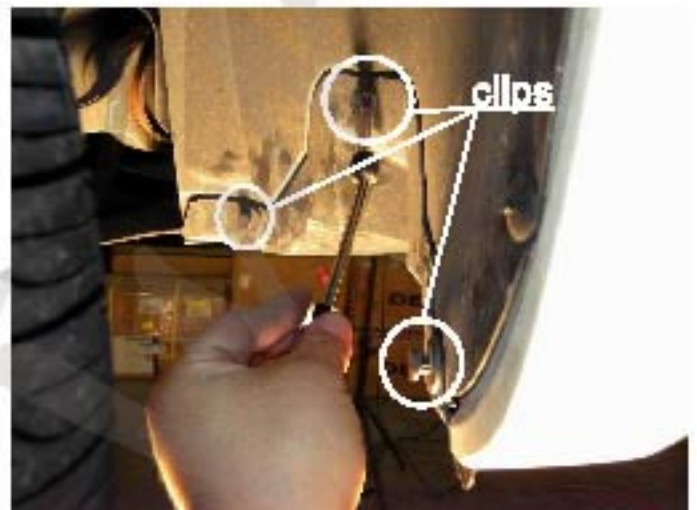

8. Remove three clips near the wheel well (Both side)




9. Remove the cover

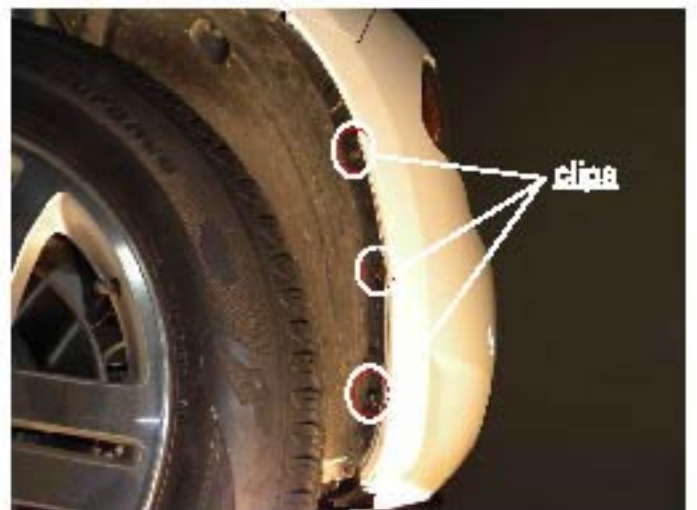

10. Remove three clips from inside of the bumper (Both side)



11. Pull out the screw inside the bumper

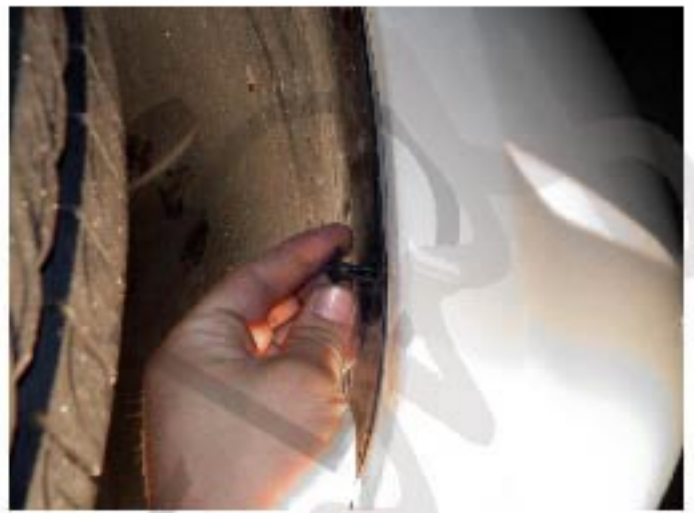

12. Then, pull the other side for complete remove



13. Remove three clips (Both side)



14. Pull out the cover (Both side)



15. Remove two 10mm bolts (Both side)



16. Remove one 10mm nut (Both side)



17. Pull out the corner light (Both side)



18. Disconnect the corner light connectors



19. Remove the bumper



20. Remove three headlight bolts



21. Remove bolts by using drive ratchet



22. Disconnect all wire harness from the headlight



24. Disconnect all connectors from the headlight



25. Connect new headlights to wire harness

Please see the "Halo and L.E.D installation instructions"  
If your headlights don't have HALO or L.E.D. You can skip that step



26. Install the new headlights



27. please repeat the picture order from 20 to 26 for the oppistion side



28. The installation now is complete