

# SPEC-D *Tuning*

## 1997-2000 DODGE AVENGER PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.  
Please wear protection before you work on your vehicle.  
An assistant is helpful when removing the front bumper.  
Please be careful while working with the bumper or body part to avoid scratching.  
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

Phillips Screwdriver	10mm Socket
Pocket Flat Tip Screwdriver	Trim Pad Remover
3/4" Drive Ratchet	
3/4" Drive Extensions (6 to 10 Inches)	

### Product Part Numbers:

2LHP-AVE00JM-TM

2LHP-AVE00-TM



## DODGE AVERNER PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS




If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.  
Please wear protection before you work on your vehicle.  
An assistant is helpful when removing the front bumper.  
Please be careful while working with the bumper or body part to avoid scratching.  
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Open the hood, there are 5 bolts that need to be removed



2. Remove the bolts from top bumper first

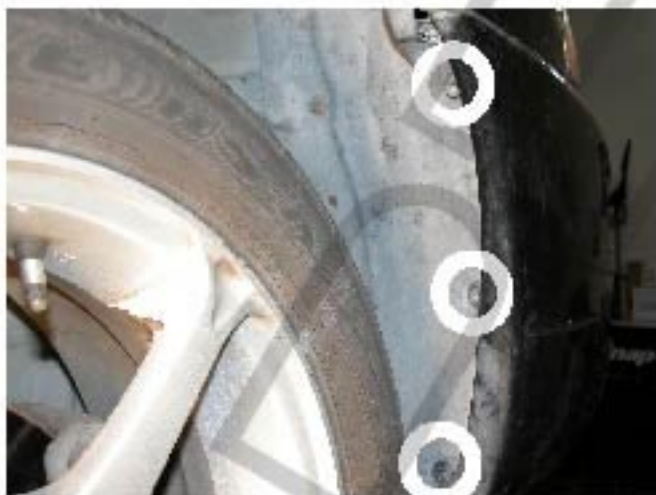

3. On the side of the bumper, there are three bolts



4. Remove the bolts



5. There are two bolts next to the three clips



6. Remove the two bolts



7. Next to the suspension, there are 10 mm bolts that need to be removed




8. Under the two bolts, there are two clips that need to be removed



9. Remove the two clips first




10. Then gently pull the plastic cover just enough to see the inside of bumper

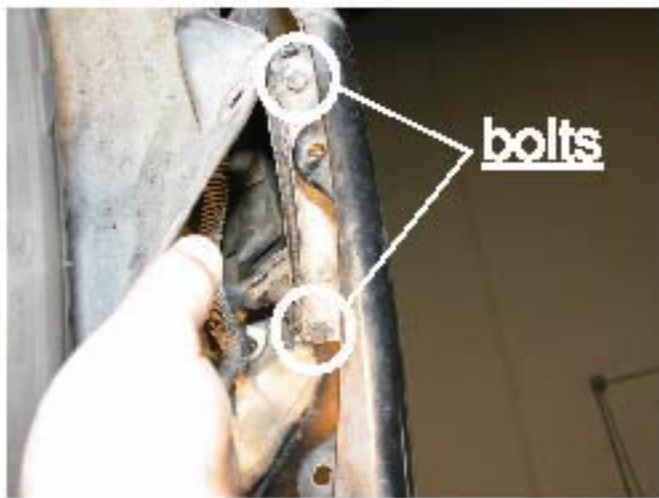

11. There are two 10mm bolts inside the plastic cover



12. Use a 10mm socket to remove the bolts

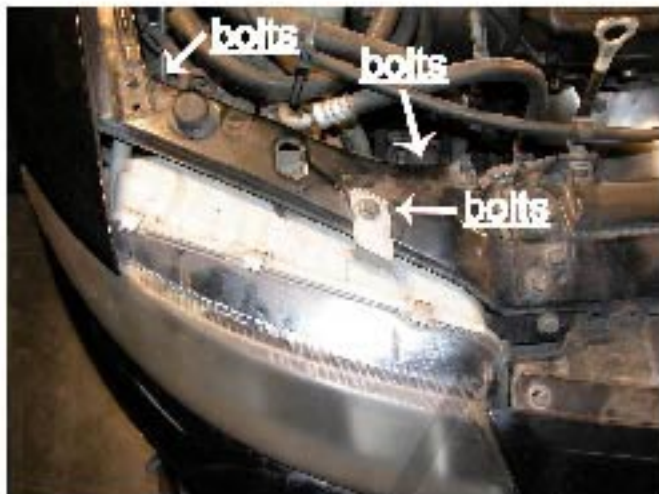

13. There are three bolts on the top of the headlight



14. Remove the three bolts



15. Gently pull out the headlight just enough to see the back of the headlight



16. Disconnect all the connectors, and remove the headlight



17. Take out the driving light socket from OEM headlight



18. Connect the driving light socket back to the wire which is located inside the vehicle



19. Install the headlight to the original spot



20. Install the bolts on the outer side of the headlight first



21. Then install the bolts on the inner side of the headlight



22. Connect all the connectors



23. Take out the driving light bulb from socket, connect the Halo LED connector in this driving light socket



24. Install the two 10mm bolts



25. Install two 10mm bolt



26. Install the two clips



27. Install the three clips



28. Install the five 10mm bolts



29. The installation is now complete

